

Marina Roller Door


FOREMOST®


Customer Service 1-888-620-3667

COPY THE MODEL NUMBER FOR YOUR RECORDS HERE #






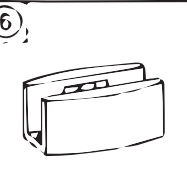
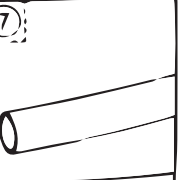
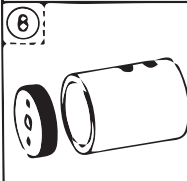
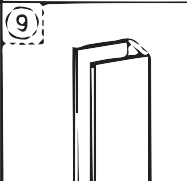
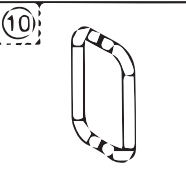
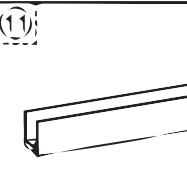
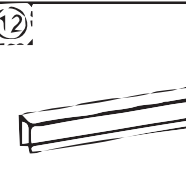
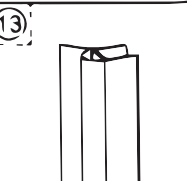
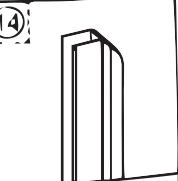
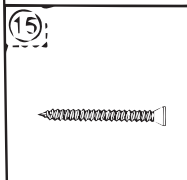
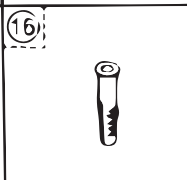
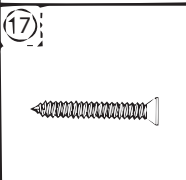
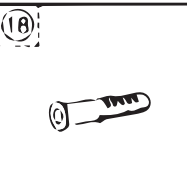
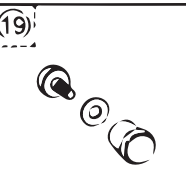
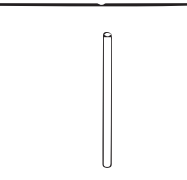
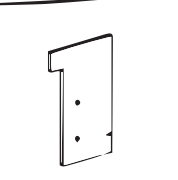
Please visit us on YouTube and view our shower door installation videos. One may be available for your installation.
www.youtube.com/foremostgroups

Read the instructions carefully. Familiarize yourself with all the parts as shown in the expanded view. The expanded view will also be a helpful reference when relating to the location for the various parts and how they are mounted.

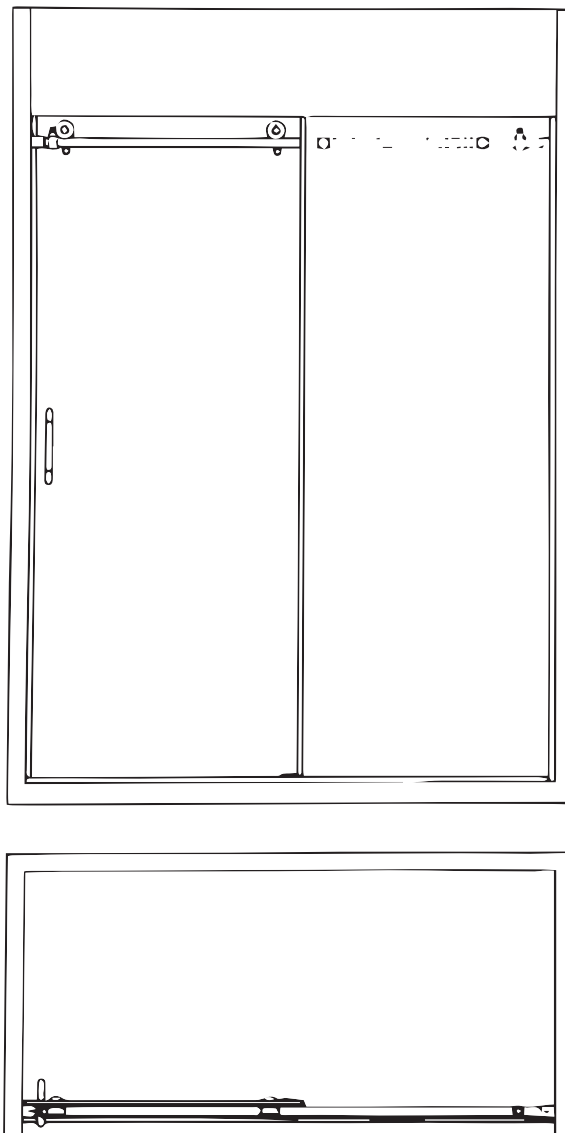


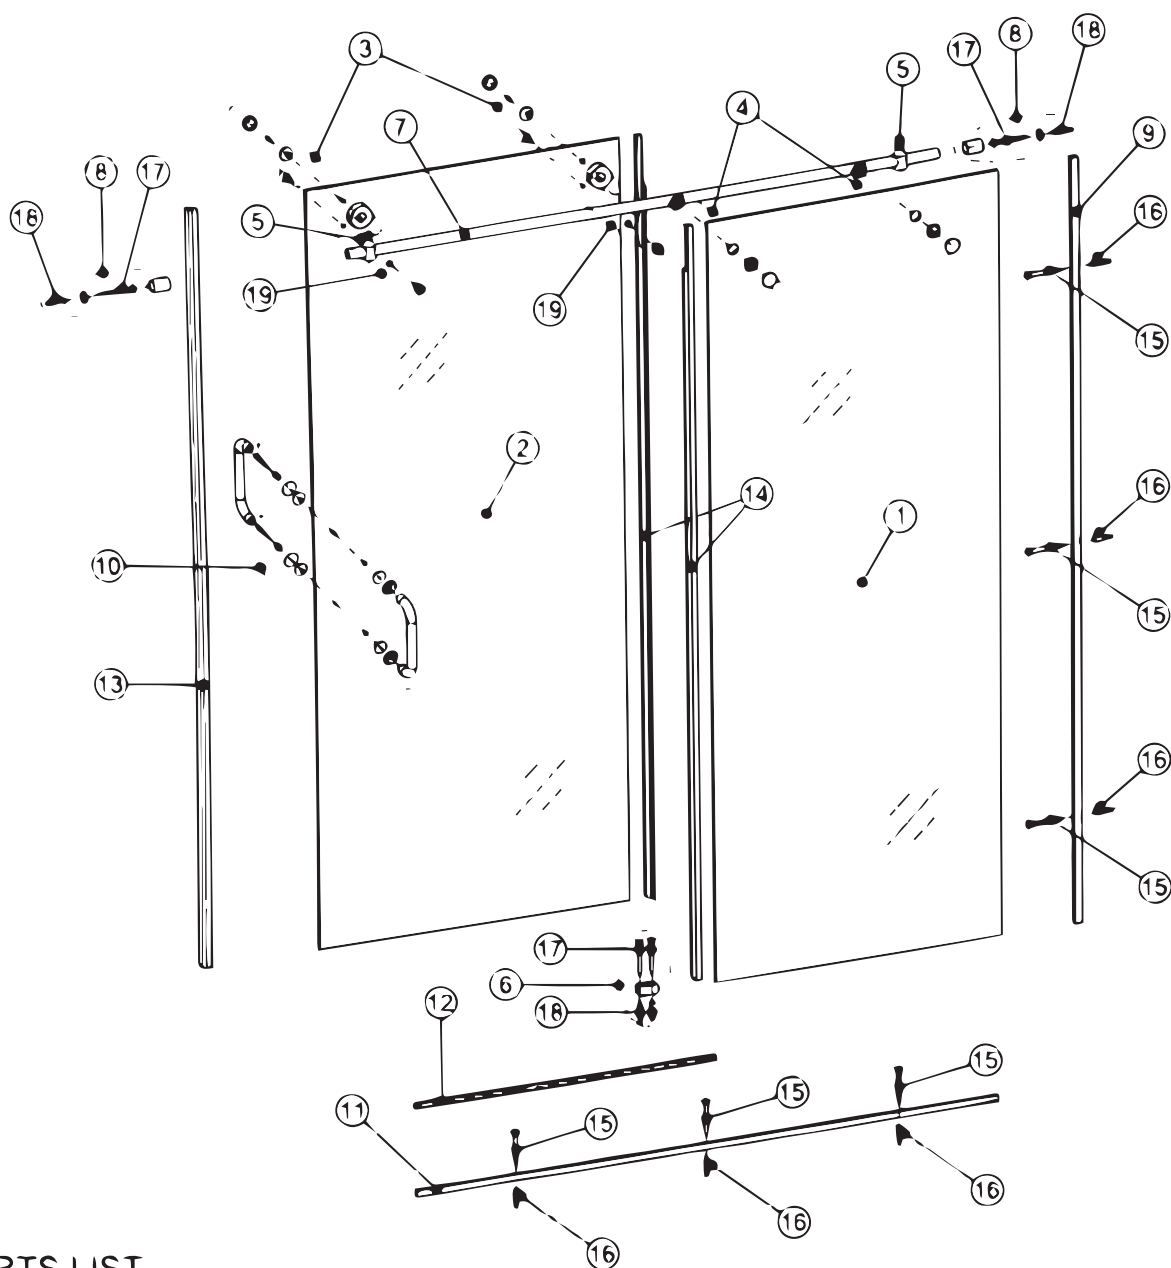

PARTS LIST

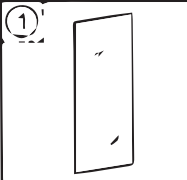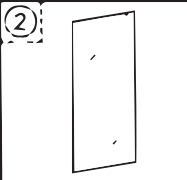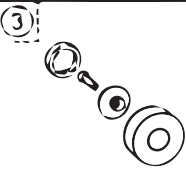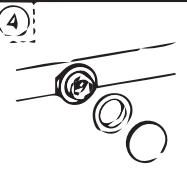						
Fixed Panel (1)	Door Panel (1)	Rollers (2)	Glass Holders (2)	Stoppers (2)	Bottom guide (1)	Running Rail (1)
						
Wall Bracket (2)	Wall channel (1)	Handle (1)	Bottom track (1)	Bottom track cover (1)	Door gasket (1)	Gap gasket (2)
						
Countersunk head (6) ST3.5x35	Ø6 Wall plug (6)	Countersunk head (4) ST4.8x38	Ø8 Wall plug (4)	Glass fix nail (2)	Install Rod (1)	Cardboard Positioner (1)

Tools Needed

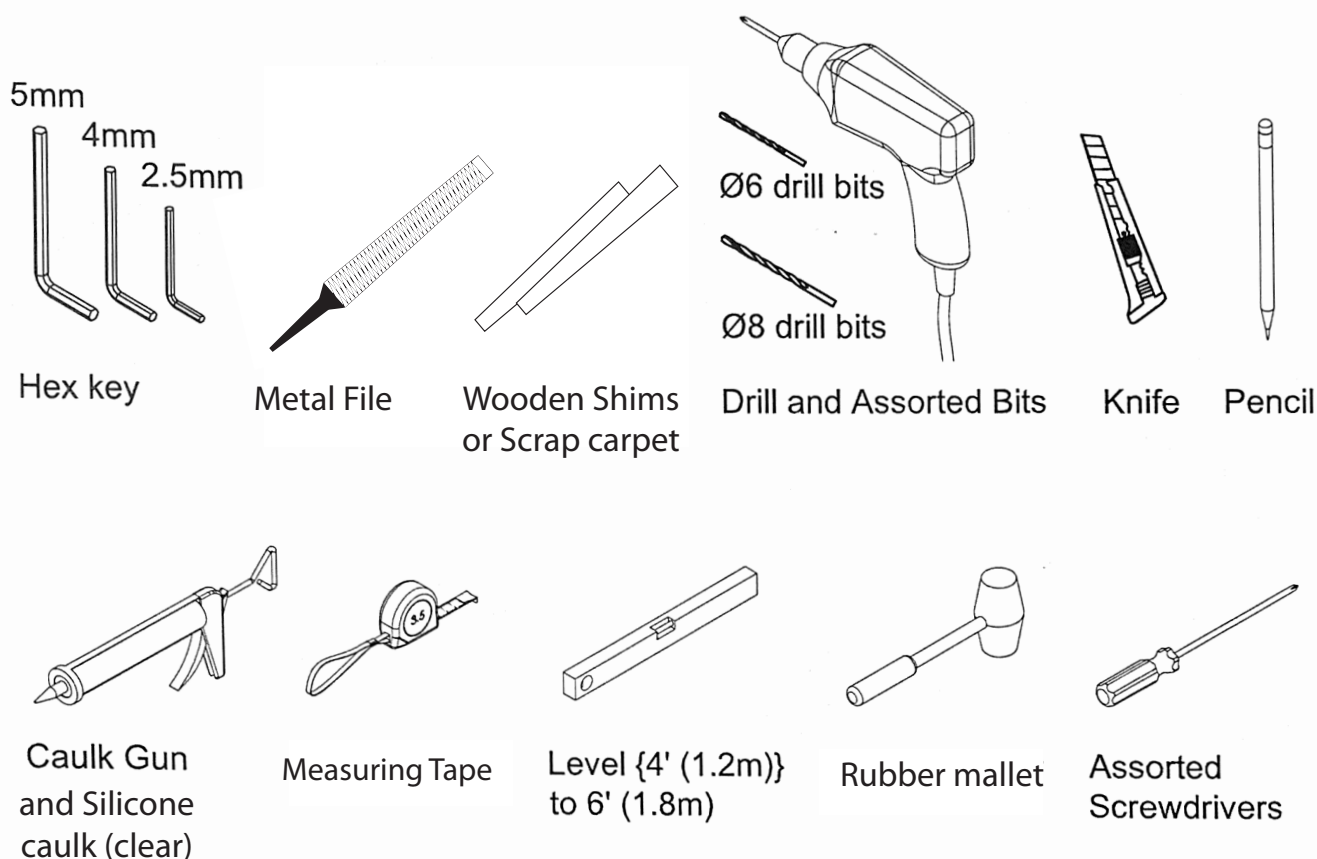

Before You Begin

CAUTION: Risk of personal injury. Always use safety glasses while cutting or drilling.

CAUTION: Risk of injury or product damage. Unframed tempered glass should not contact hard surfaces or it may shatter. Do not touch the edge of the tempered glass panel with tools or any hard objects. Do not set the unframed tempered glass edge directly on the floor.

CAUTION: Risk of injury or product damage. Do not attempt to cut tempered glass. Tempered glass shatters when it is cut.


CAUTION: Risk of product damage and property damage. This shower door is very heavy. Do not install it to plastic shower modules or drywall unless additional support is provided behind the wall.

IMPORTANT NOTE: This door requires a 2-3/4" flat surface for proper installation.


- ☐ Before starting the installation, lay out and identify all of the parts. Inspect them for damage.
- ☐ Closely follow the instructions pertaining to the sealant application on the door.
- ☐ Two people should perform this installation.

**Choose the shower door open directions - left or right.
Follow the appropriate diagram below.**

Left Hand Assembly


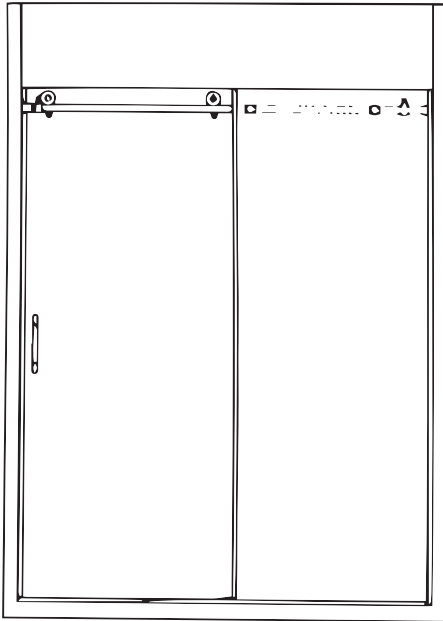


Right Hand Assembly

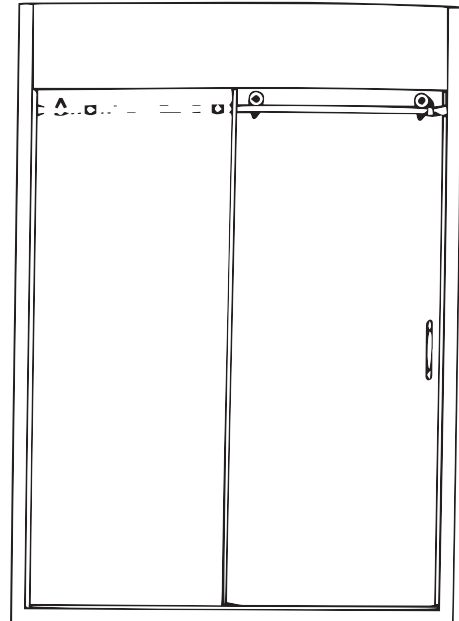



STEP 1:

Install rollers to door. Install them to door panel as illustrated, fastened by Hex key 4mm.
Note the location of adjustment cams on the rollers (Figure 3). Will be used for adjustments in Step 18.

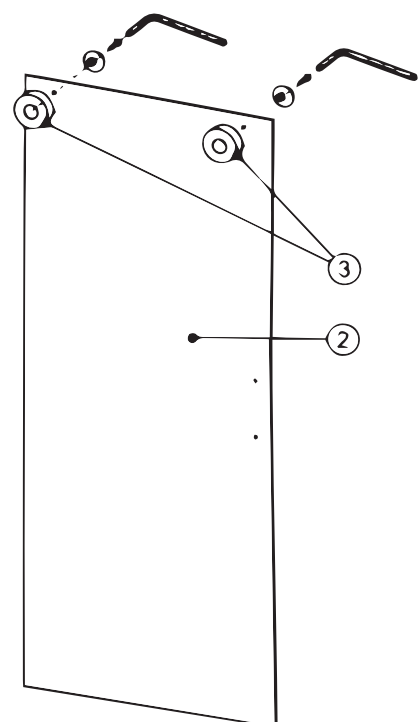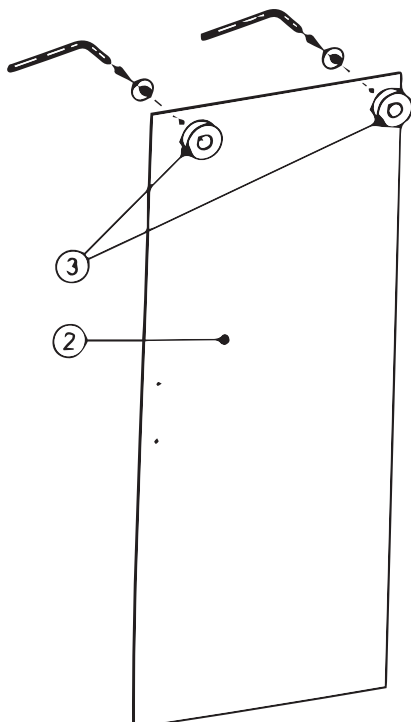

STEP 2:

Place the door panel inside the shower on wood shims or carpet to protect the glass.

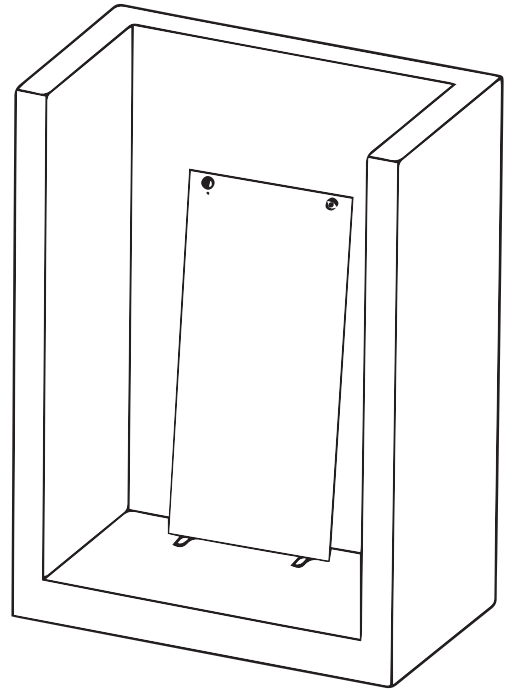
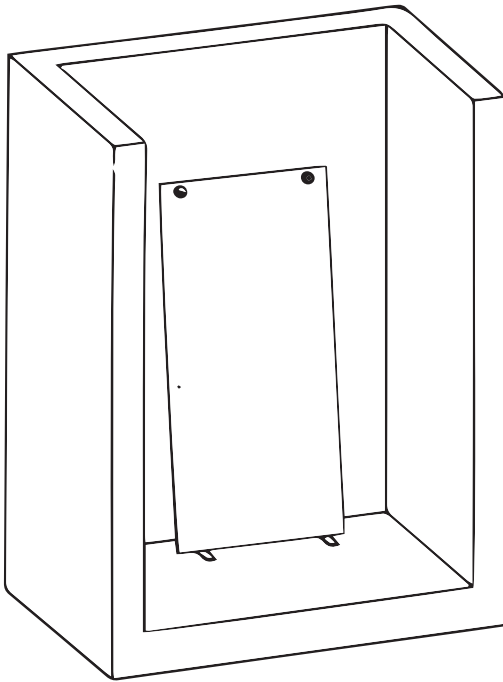


STEP 3:

Use a professional level and the provided 'cardboard positioner' for this step.


Before installing the wall channel, use it to determine the position of both (right and left) wall brackets. Use the bottom hole only to mark the wall bracket placement. (Approx. 73")

You need 3" of base width to mount the bottom rail to the shower base (see page 11). Mount as close to the outside of the shower base threshold as possible.

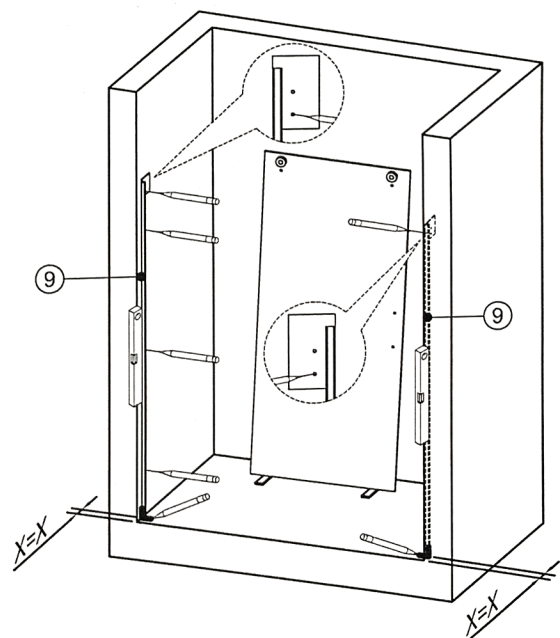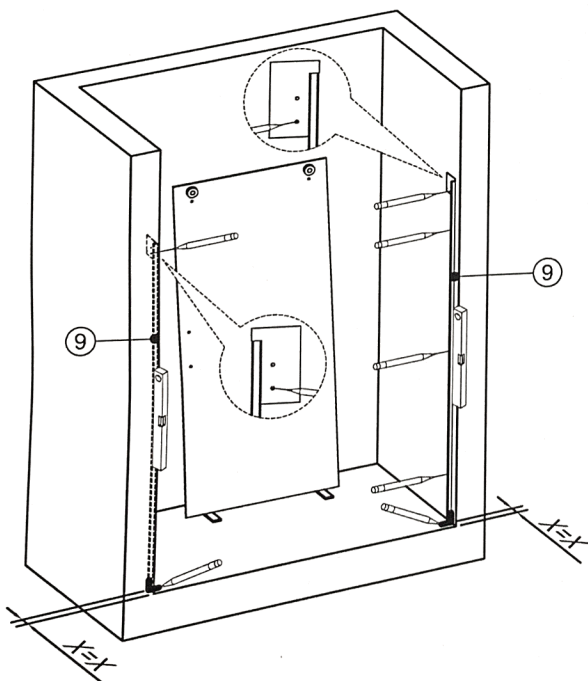


STEP 4:

**Drill holes for wall channel with a 6mm (15/64") drill bit.
Drill holes for wall bracket with a 8mm (17/64") drill bit.**

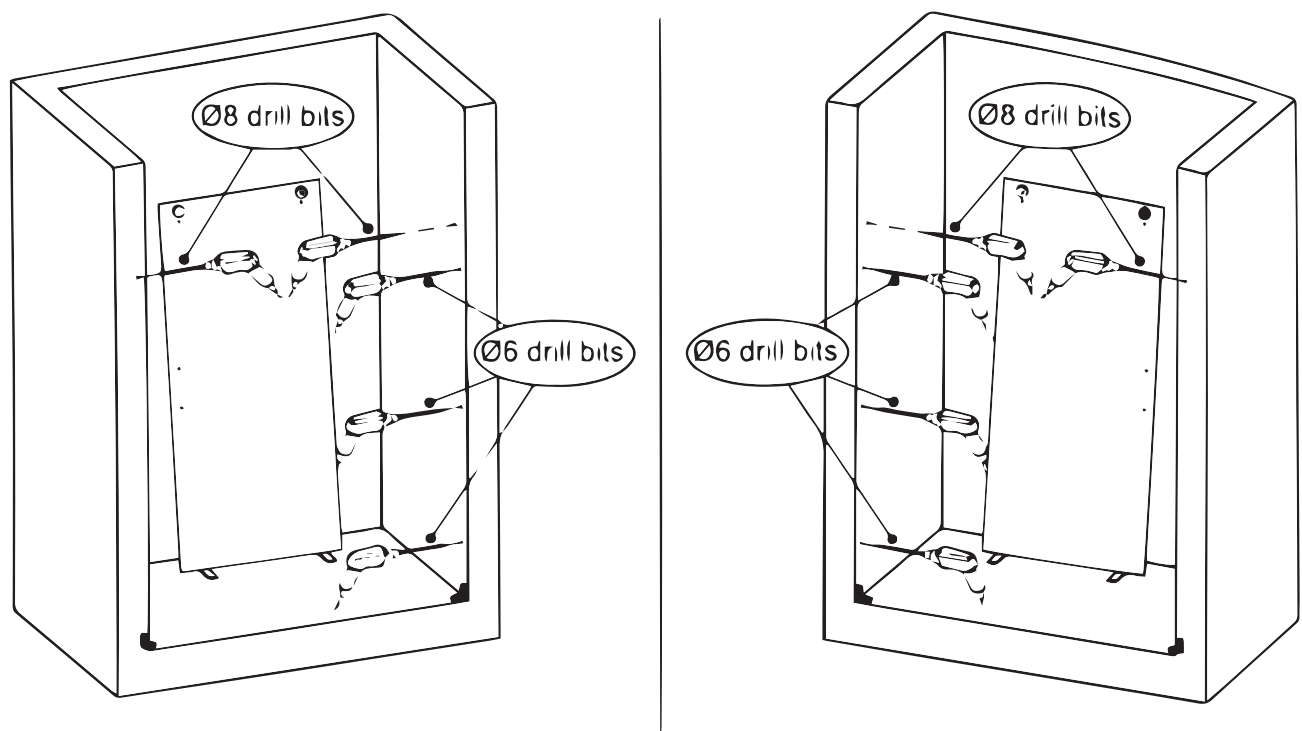

STEP 5:

Install the wall plugs.

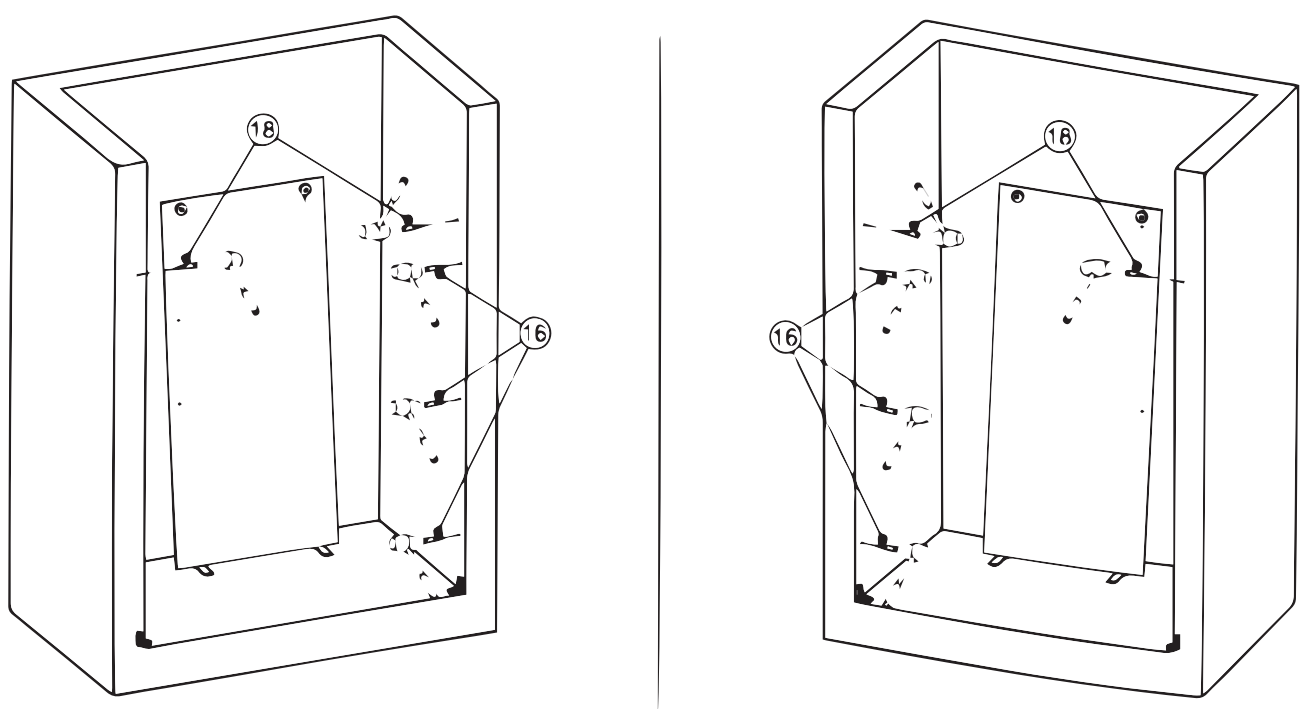

STEP 6:

Install the wall channel with (3) ST3.5x35 (Part #15) screws.



Install the wall brackets.



Each wall bracket has two parts. Take the wall brackets apart.

Install the wall bracket base (Figure A) with (1) ST4.8x38 (Part #17) screw. Repeat on other side.

Set the other part of the wall bracket aside until Step 14.






Figure A

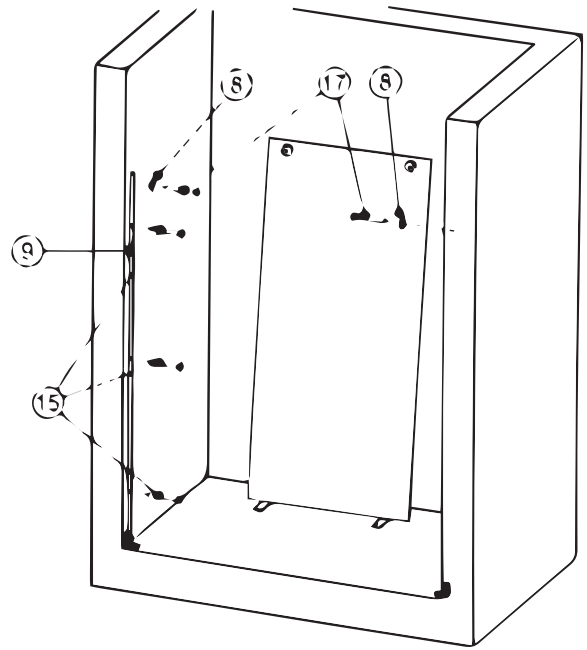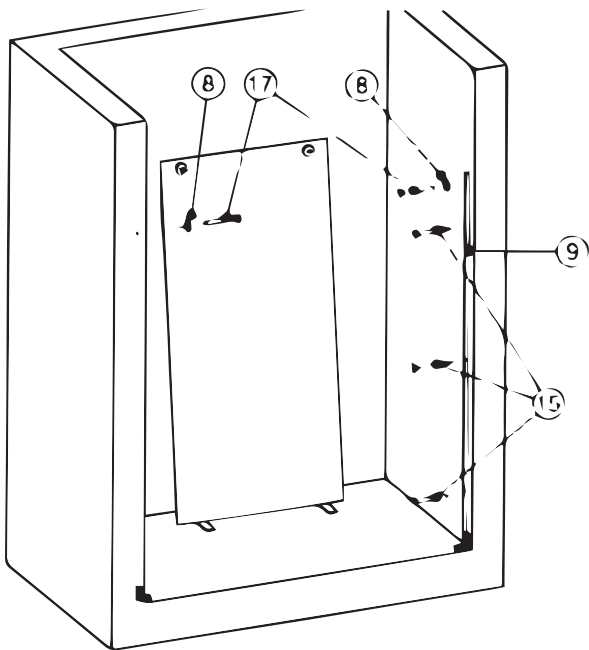



STEP 7:

Measure and cut the bottom track. Measure the bottom from the wall to the wall channel. Mark the bottom track at the determined distance. Cut to size. File the rough edges smooth. The bottom track should now fit between the wall and the wall channel.

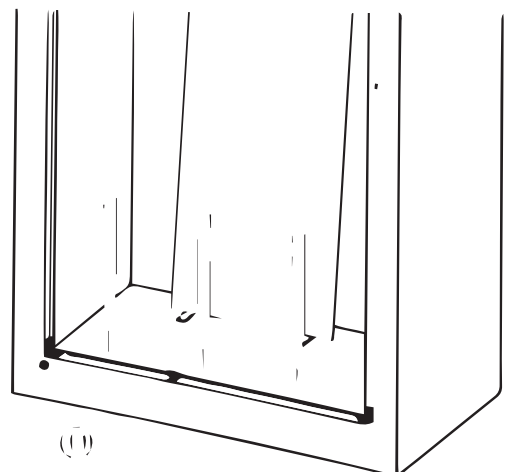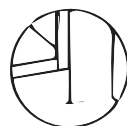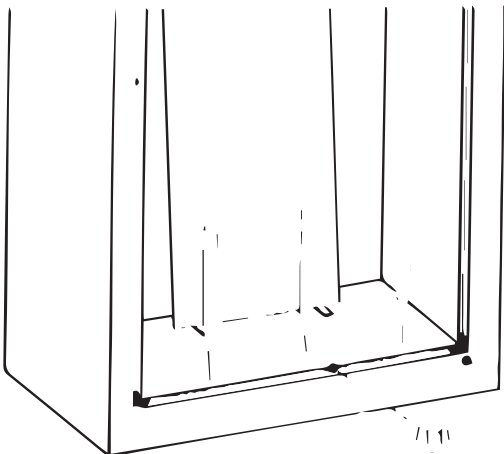



STEP 8:

Drill holes for the bottom track with a 6mm (15/64") drill bit.

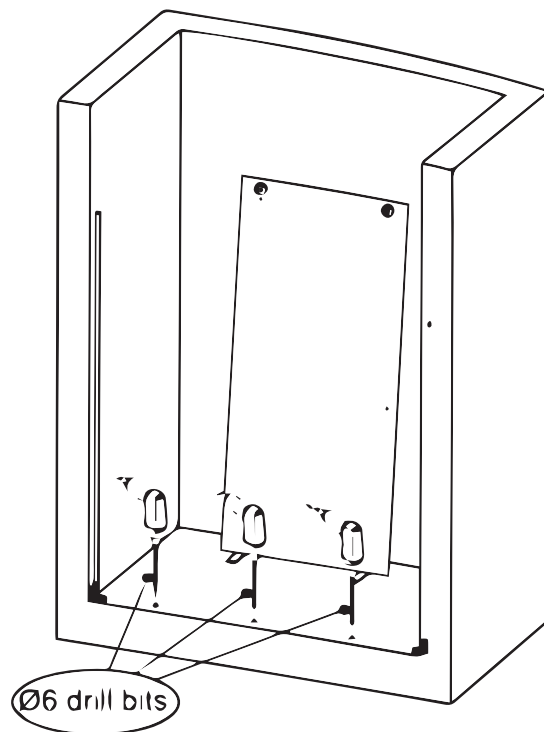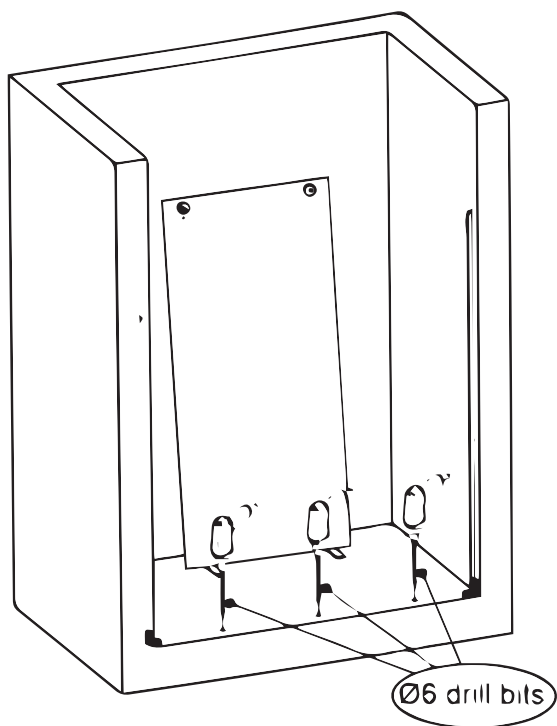



STEP 9:

Install the wall plugs.

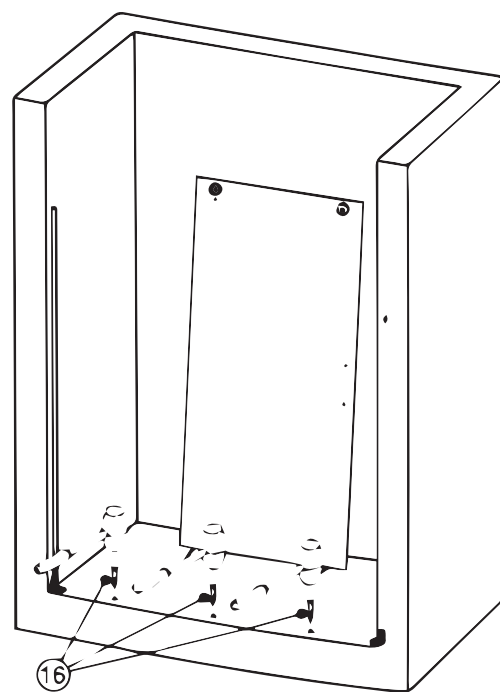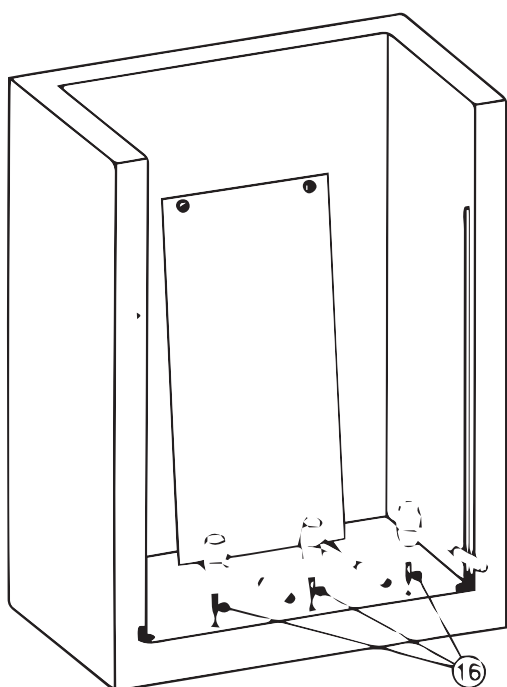



STEP 10:

Install the bottom track with (3) ST3.5x35 (Part #15) screws.

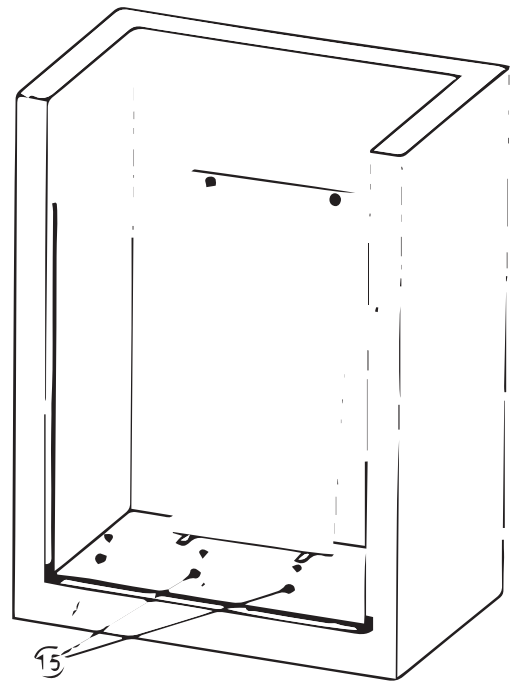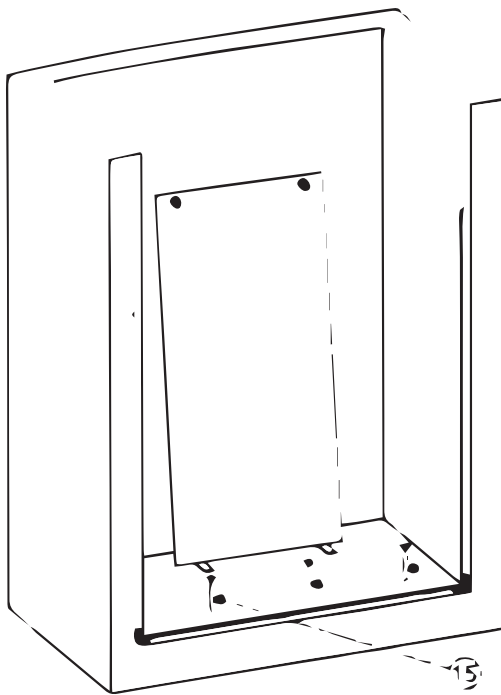


STEP 11:

Apply a thin bead of clear silicone to the wall channel and bottom track.

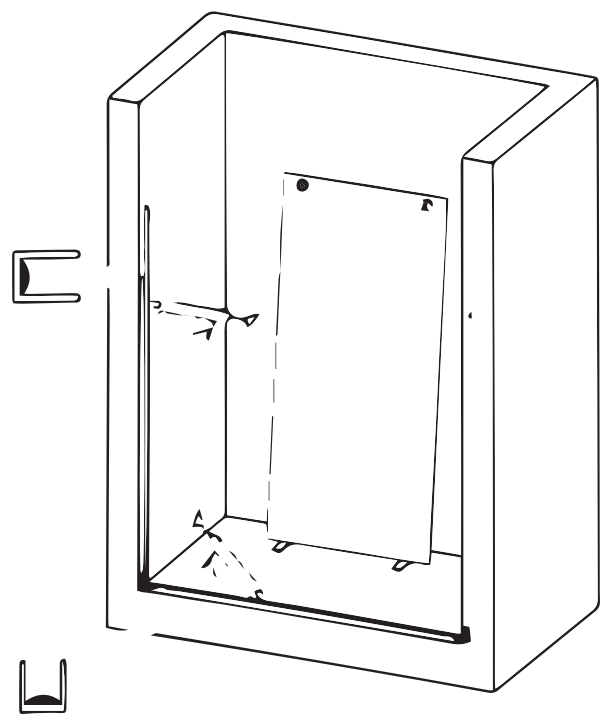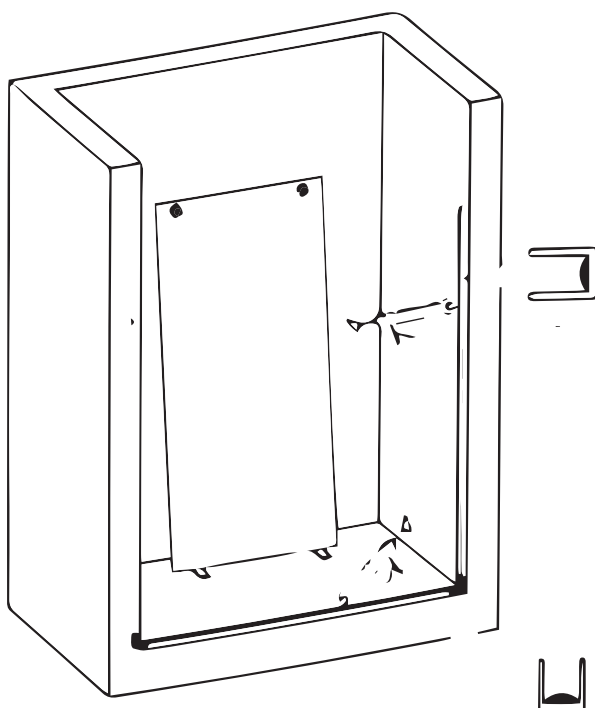


STEP 12:

Install the fixed panel into the bottom track and the wall channel. Wipe excess silicone.

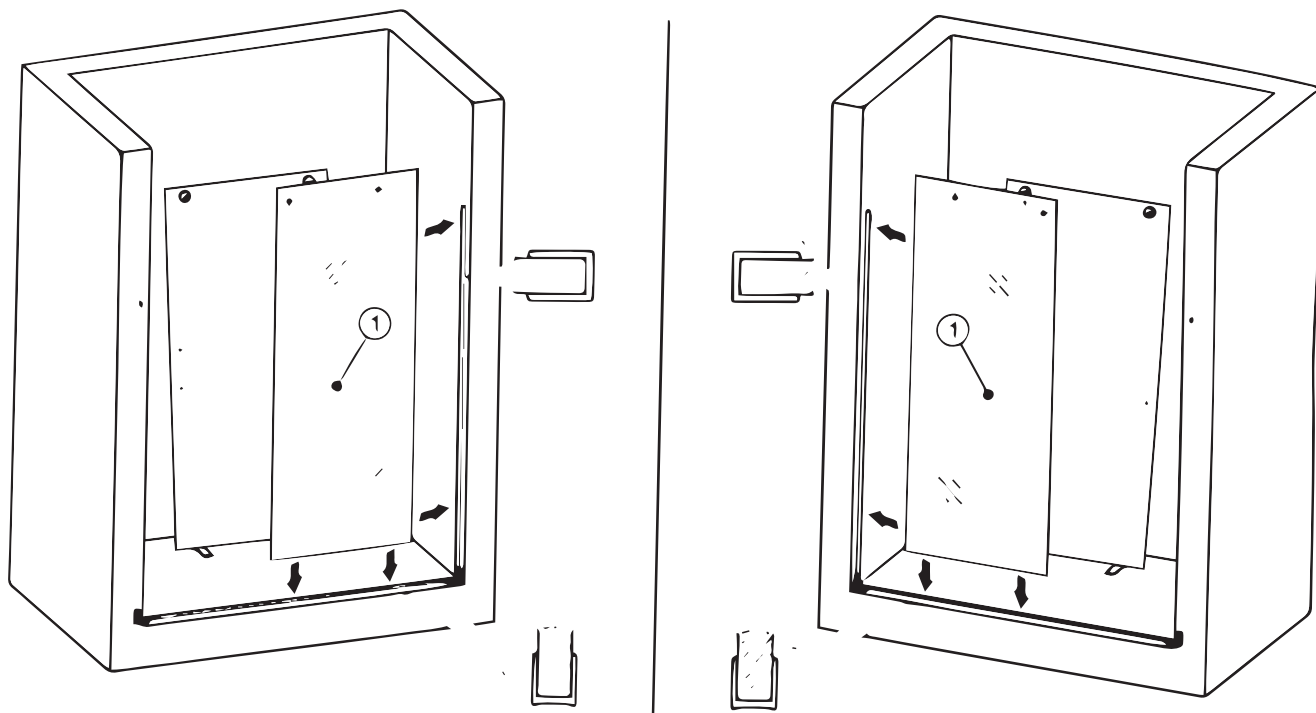

STEP 13:

Measure and cut the running rail. Measure from wall to wall at the top of the shower door opening. From this measurement subtract 3/4" and cut. Be sure to cut the correct side. See below.

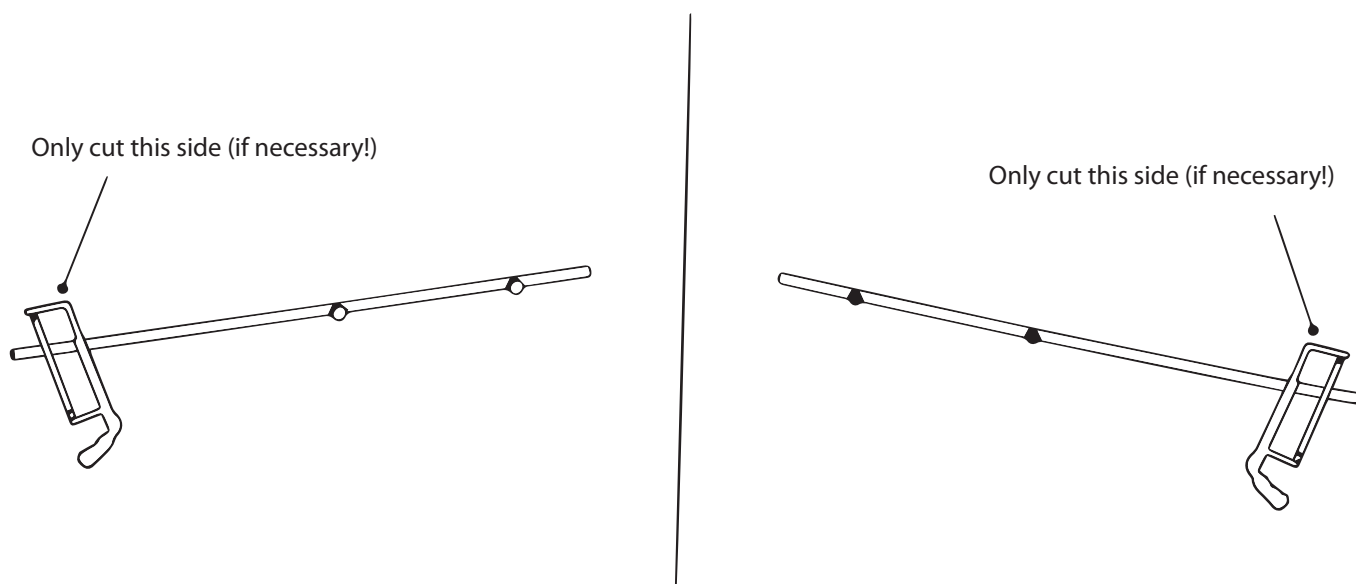



STEP 14:

Prepare the running rail.

Position stoppers on the running rail. Secure them temporarily in place, pointing upright.

Take the glass holders apart using the install rod.

Place the outer part of the wall bracket onto the running rail.

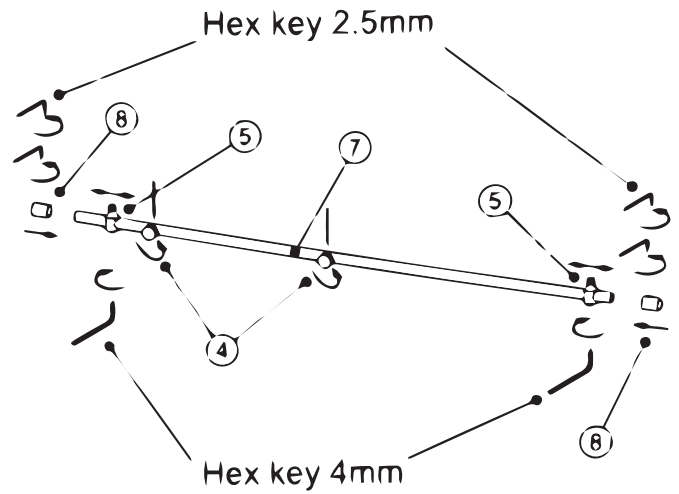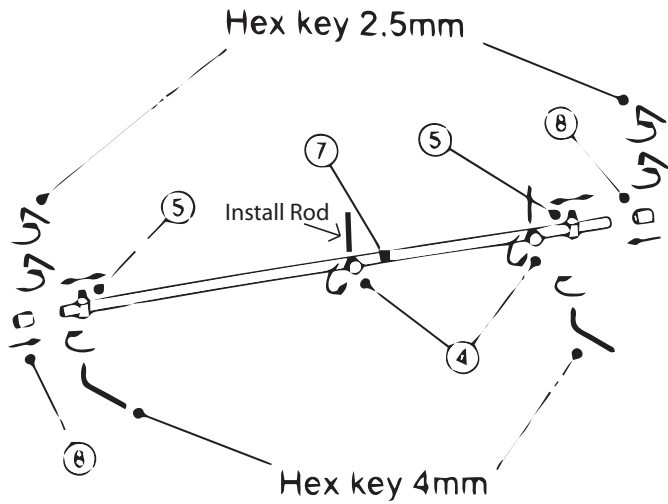



STEP 15:

Mount the running rail.

First, fasten the running rail to the fixed panel with the glass holders.

Then, fasten the outer parts of the wall brackets to the the wall bracket bases.

Tighten all hex screws for the wall brackets.




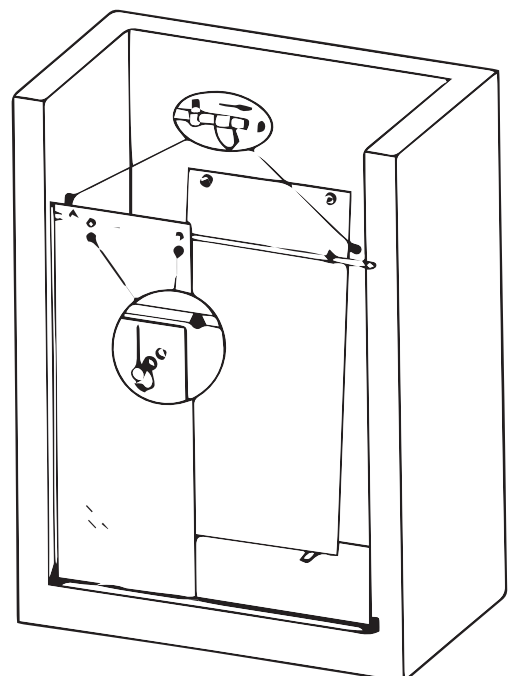
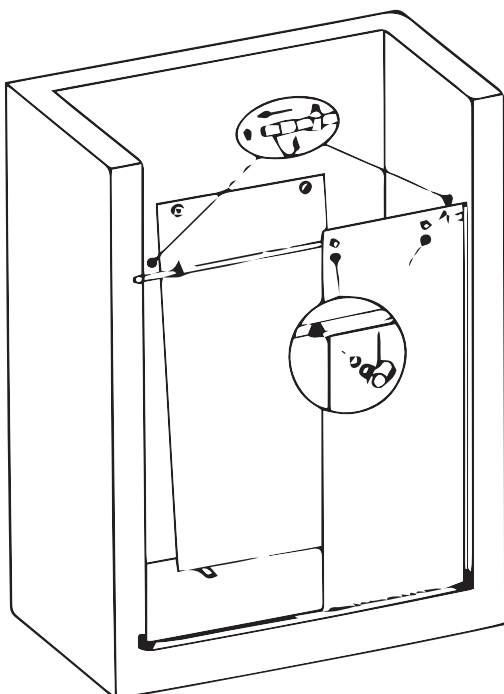


STEP 16:

Install the bottom guide.

Using the 'cardboard positioner' line the slot up evenly with the edge of the fixed glass panel. (Figure 1)
Drill holes with a 8mm (17/64") drill bit. Install the wall plugs.



Install the bottom guide (Part #6) with (2) ST4.8x38 (Part #17) screws.

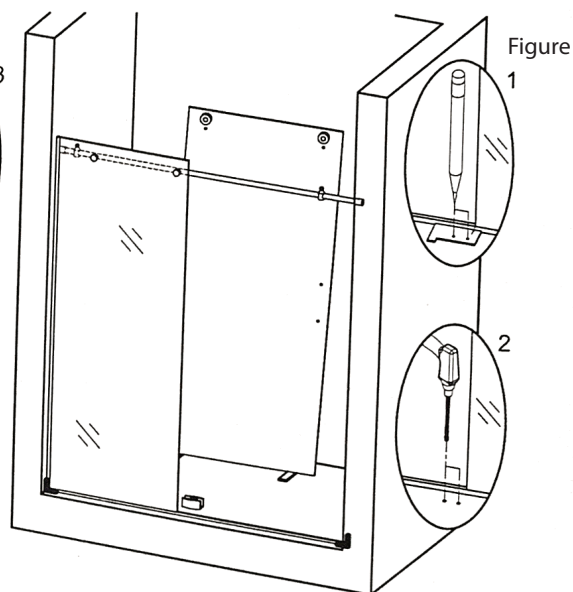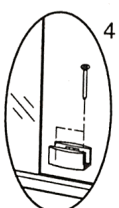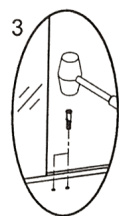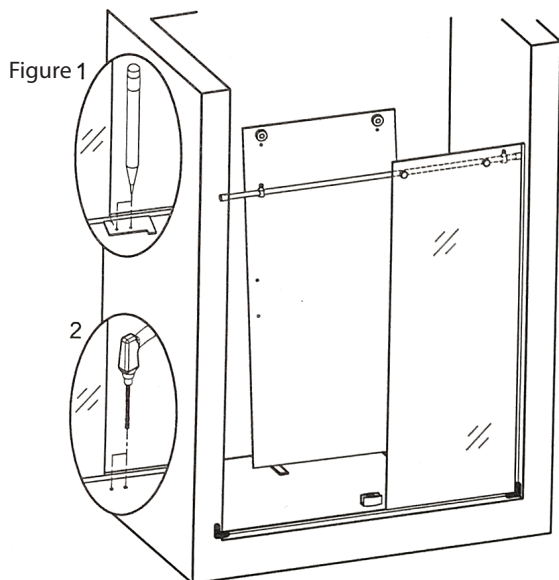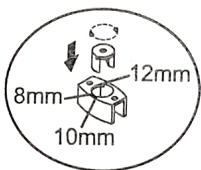

STEP 17:

Install the door panel.

Hang the sliding door, ensuring that the rollers are riding on the running rail.
Make sure the bottom of the door is within the bottom guide.

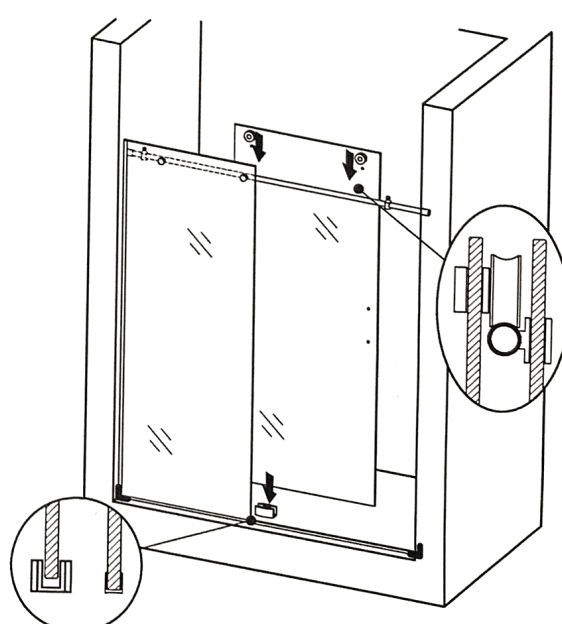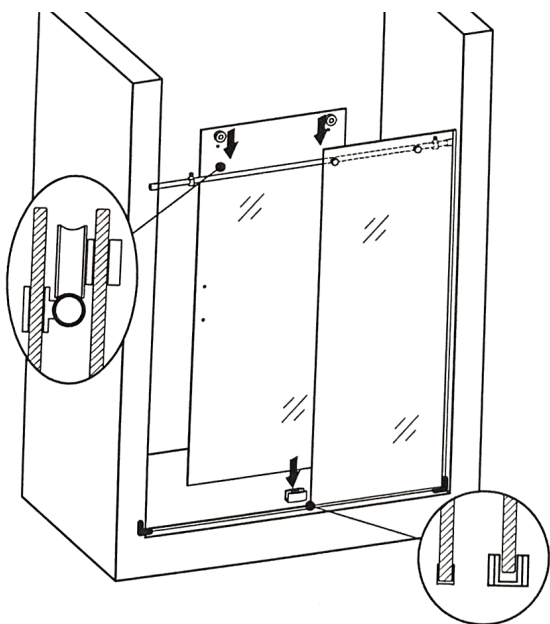


STEP 18:


Install the handle as illustrated.

Install the door gaskets and gap gaskets.

Insert the door gasket to the wall side and insert gap gasket to the inner side of the door (if needed). Also included is another gap gasket for the outside of the door. Not likely to be needed.


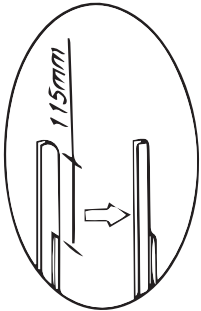


Cut the gap gaskets as illustrated.

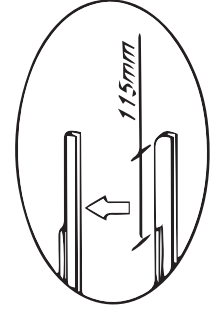

Cut the gap gaskets as illustrated.

Install the Glass fix nails as illustrated.

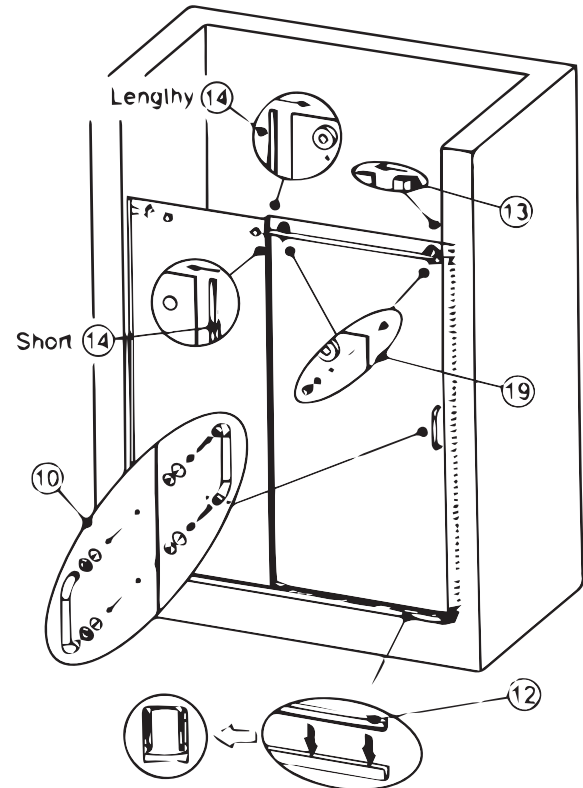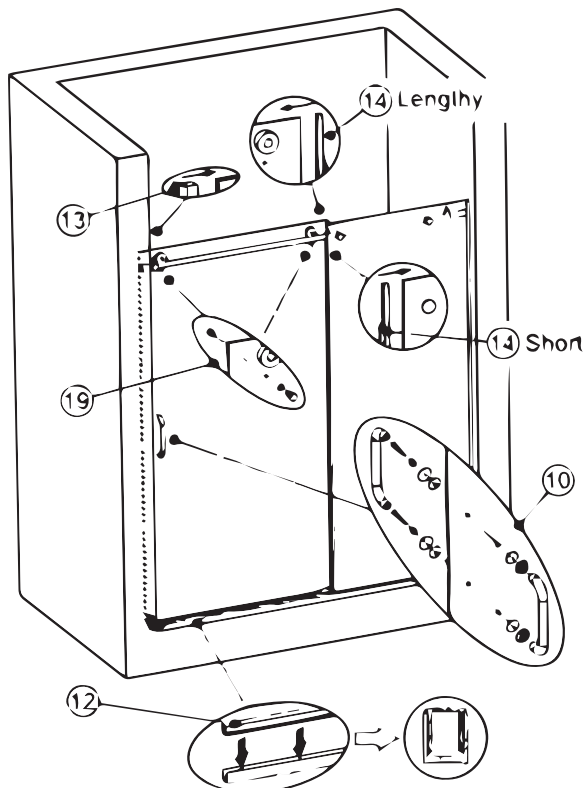

Measure and cut the bottom track cover. Measure from the wall to the fixed glass panel. Cut to size. File the rough edges smooth. Press-fit the bottom track cover as illustrated.


STEP 19:

Adjust the door panel.

Using adjustment cams, use a hex key or install rod to straighten the door panel tightly against the shower wall.

Fasten the stoppers and rollers.

Adjust the stoppers so the glass door panel does not smash into the shower wall.

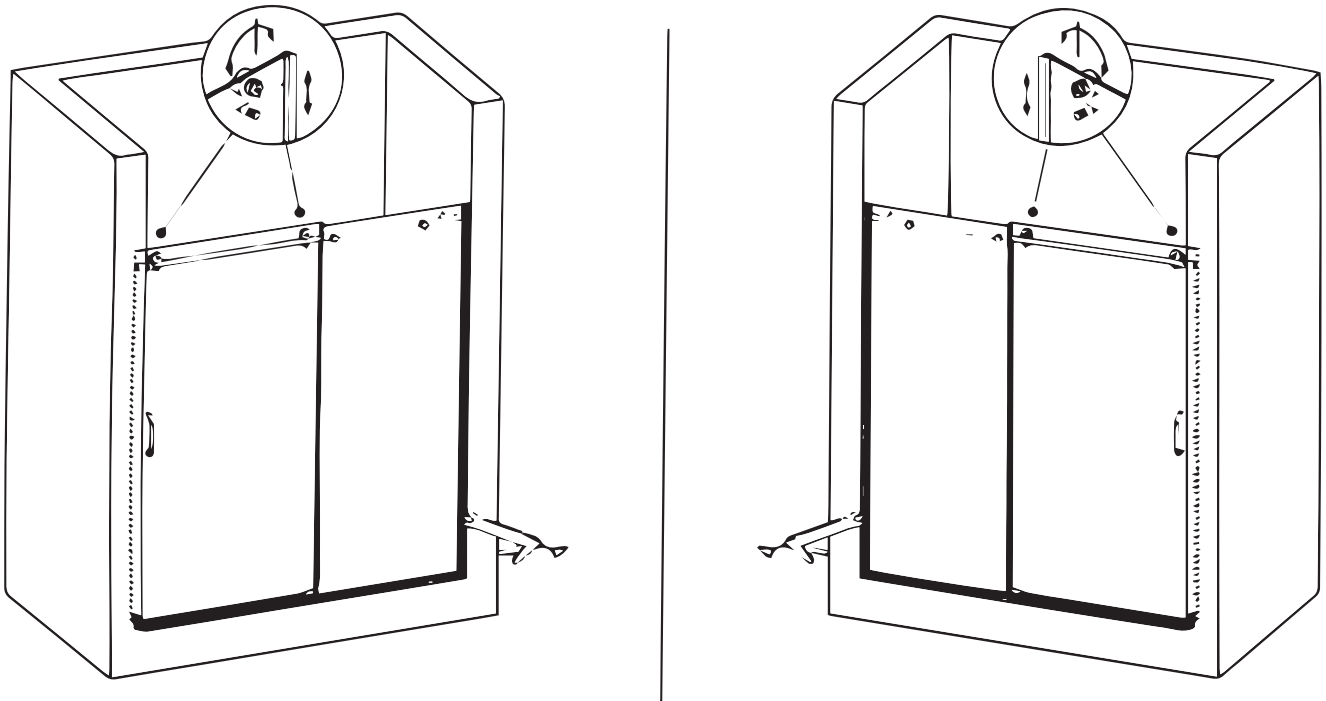

Seal the door assembly.

Apply silicone along the wall channel and bottom track from the inside of the shower.

Be sure there is silicone between the fixed glass panel and the wall channel (applied in step 11).

Keep the entire area dry for a minimum of 24 hours.

Your installation is now complete.

If you have any questions or require any assistance please contact our customer service center in Hobart, Indiana.

Toll Free: 888.620.3667
Email: KandBservice@foremostgroups.com
Hours: 8:00am-4:30pm (CST) Monday-Friday

ATTENTION CONSUMER:

Important Shower Enclosure
Warranty Information
Please do not discard

*Thank you for your purchase
of a shower enclosure
from Foremost Groups, Inc.*

In order to be eligible for product warranty,
please register your enclosure on our website
within two (2) weeks of installation. Go to
www.foremostbath.com/warranty
or scan the code below and follow the instructions.

For any questions or comments
about your new shower enclosure,
please contact Foremost Customer Service at
1-888-620-3667

Thank you!

FOREMOST